

HR series

Code Setting Timer

OPERATION GUIDE

Thanks for the purchasing our HR series Timer. Please do read the manual before the use of the meter so that you could make a full acknowledge of our product and operate it correctly. The edition of the manual is RE-H-05A0.

1、Cautions

(1) Do not use this product in following environment:


- full of the air that are easy to blast and fire
- full of strong erodible air or powder dust
- high temperature
- strong vibration or strike
- with water, oil dust, chemical splashing

(2) Please make sure that the wire connection of every pin is set correctly and the power supply is in use limit before it is powered on.


(3) Breaking up, changing and repairing our product by yourself is forbidden

(4) Please be far away from high-voltage, big-current dynamical wire while wire assignment for avoiding anti-jamming.

2、Panel function instruction

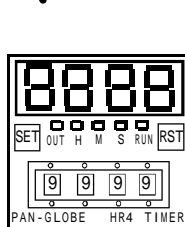

HR4

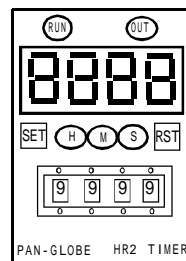

HR2

NO	Panel words	Content instruction
1	OUT	Output indicator
2	H	Hour unit indicator
3	M	Minute unit indicator
4	S	Second unit indicator
5	RUN	Working indicator
6	SET	Output delay time set key
7	RST	Reset key


3、Characteristics index

Power supply	85V-265VAC, 50Hz/60Hz(available to select 10-50VDC input)
Current consumption	5VA MAX
Contact rated	250VAC/3A 或 30VDC/5A
Isolation strength	100M Ω /500VDC
Dielectric strength	\geq 2KV/1MIN
Operating temp./hum.	-20~60 $^{\circ}$ C (no ice) 35~85%RH
Life of relay	Mechanical: $10*10^6$; electronic: $10*10^5$
Output delay time	0.1S~9.9S
Timing method	Up or down selecting
Repetivity	0.2% F.S
Setting accuracy	0.1% F.S
Reset time	200mS
Reset method	Power off or RST switch


4、Type distinguishing

HR	■	—	■	■	
size	code	counting digital	code	control output	code
DIN48 × 48	4	3 digital	3	one time limit contact	A
DIN87 × 58	2	4 digital	4	two time limit contact	B
				time limit & instantaneous contact	

5、Dimension and panel cut out

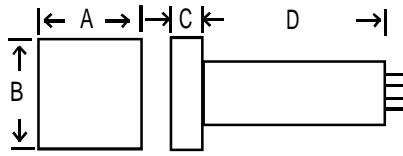


Appearance

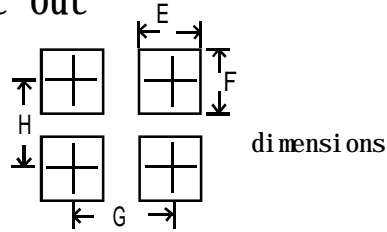

dimensions

size type	A	B	C	D	E	F	G	H
HR4	48	48	6	70	44+0.5	44+0.5	80	80
HR2	58	87	6	70	50	62	90	110

6、Connecting wire instruction

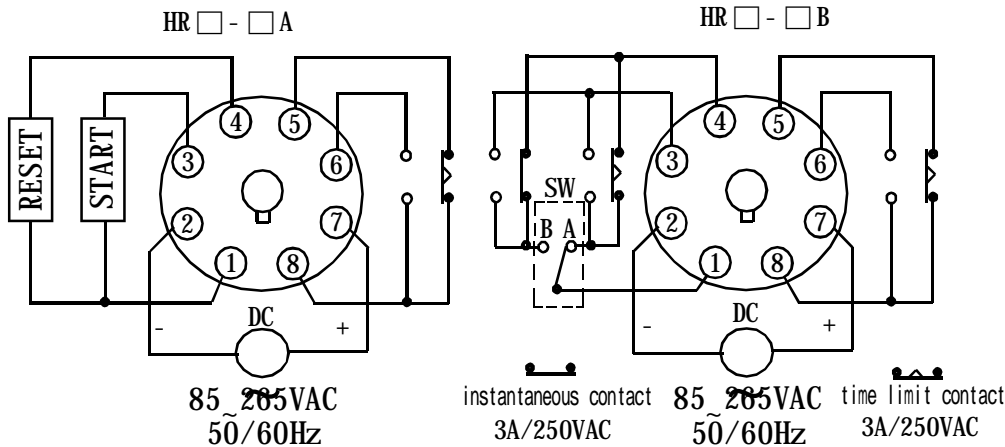

7、Operating describe

1、Delay time setting

Press SET key 5 seconds => d □□ => Press SET key to set delay time

2、Timing unit selection

Press SET key with RST key to set timing unit:

0.1H-> 0.01H-> 0.1M-> 0.01M-> 0.1S-> 0.01S

3、Slide switch:

“ M ” : Manual reset “ A ” : Two time limit contact

“ AU ” : Auto reset “ B ” : One time limit & instantaneous contact

“ LK ” : To lock unit selection “ HL ” : Memory function

“ UL ” : To unlock unit selection “ NH ” : no memory function

4、SW1 switch and SIP switch:

SW1 switch:

compare to figure 1 output method

SIP switch:

U: Up timing

D: Down timing

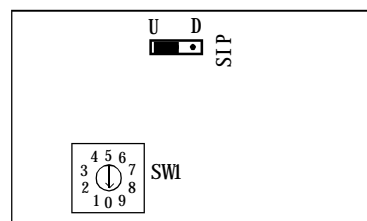


Figure 1: HR □ - □ A output method logic relationship

Manual reset  Auto reset 

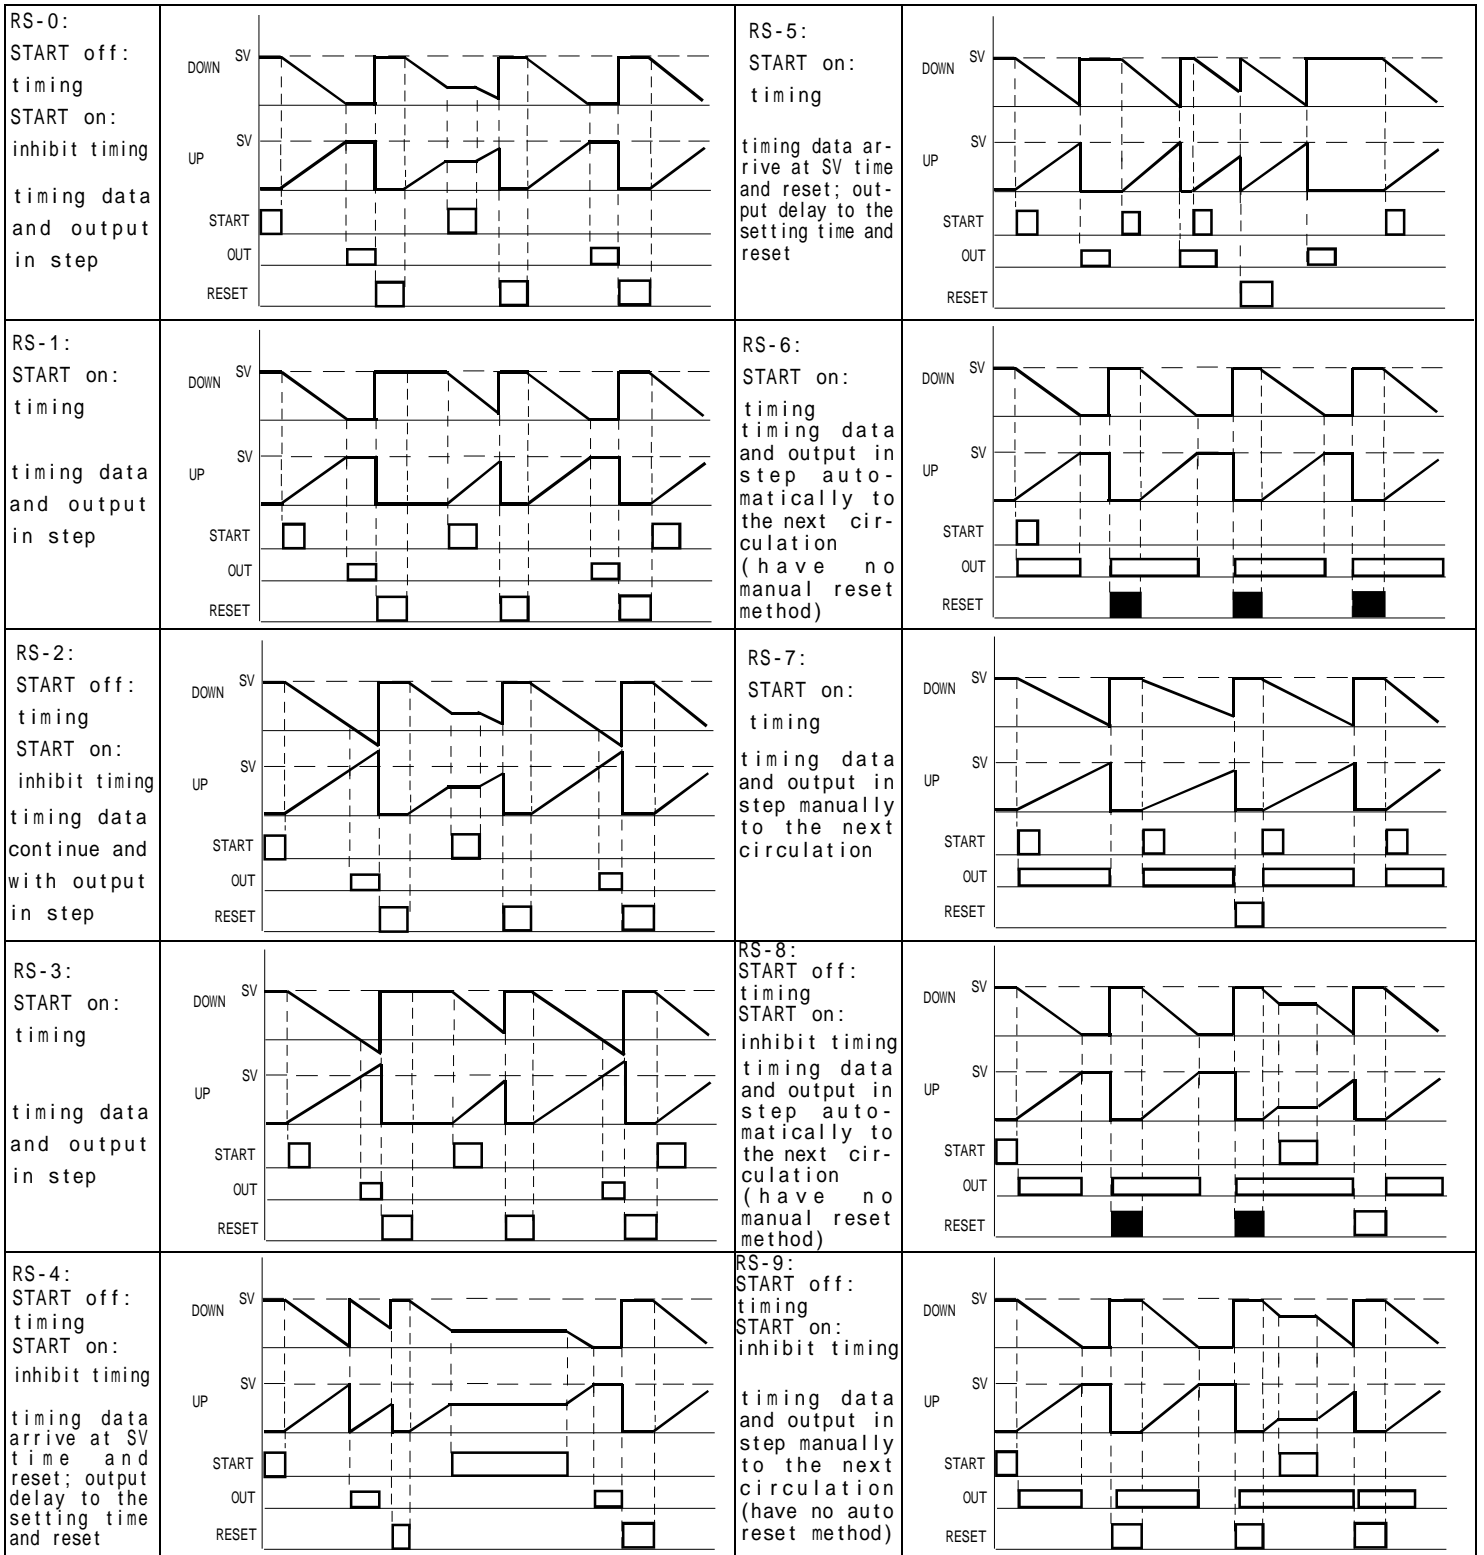


Figure 2: HR □ - □ B output relationship

